


8 Place the net over the frame. The Net World Sports label indicates the top of the net, ensure this is at the top of the crossbar. Align the side seams with the arching tension bars so that the net sits comfortably over the goal.


9 Starting with the top corners, fit the net by wrapping it around the posts and clipping to the inside using the net clips provided. Attach clips equally along the length of the net.

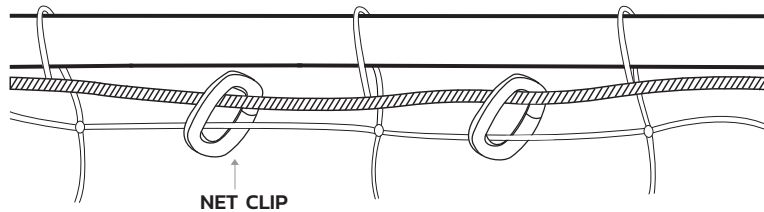

10 Anchor the goal using the provided U-pegs ensuring posts are upright and the crossbar is level. The U-pegs fit around the base and push into the ground to keep the goal steady.

FORZA

3 x 2 MATCH GOAL

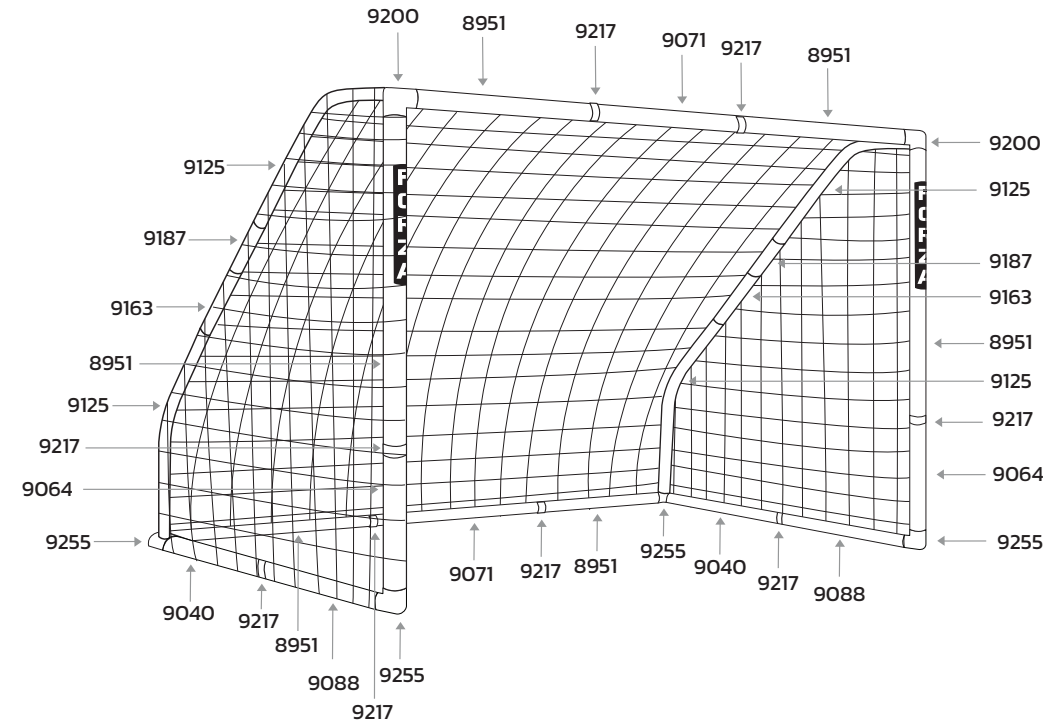

PART NO	8951	9040	9064	9071	9088	9163	9170	9125	9200	9217	9255	LOCKING CLIPS	U-PEGS	NET CLIPS	NET
QTY	x6	x2	x2	x2	x2	x2	x2	x2	x4	x8	x2	x1 PCK	x4	x1 PCK	x1



@NetWorldSports


www.networldsports.co.uk // +44 (0) 1691 683 807 // cs@networld-sports.co.uk

www.networldsports.com // 1-866-861-9095 // cs@networld-sports.com


NET WORLD SPORTS

1 Lay out all components and ensure that they match the parts list.


2 Insert all Locking Clips into the connectors 9200, 9255 & 9217.

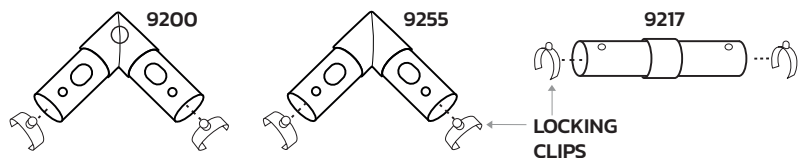

3 Assemble the base, attaching parts 8951, 9088, 9040 & 9071 to the connectors.

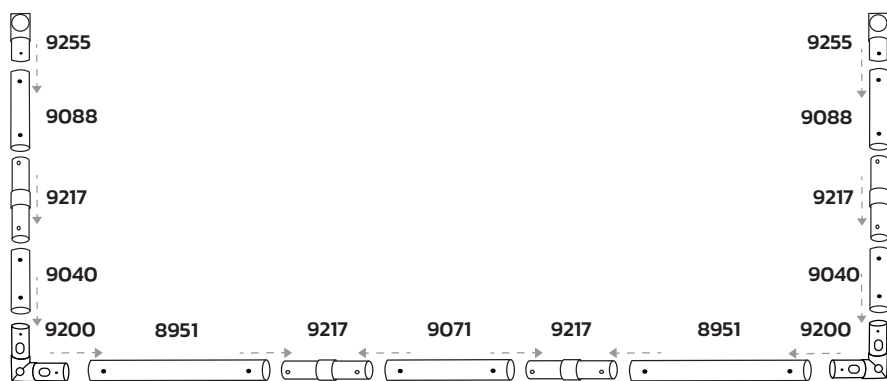

4 Assemble the crossbar and the upright section, attaching 9064, 9071 & 8951 to the connectors.

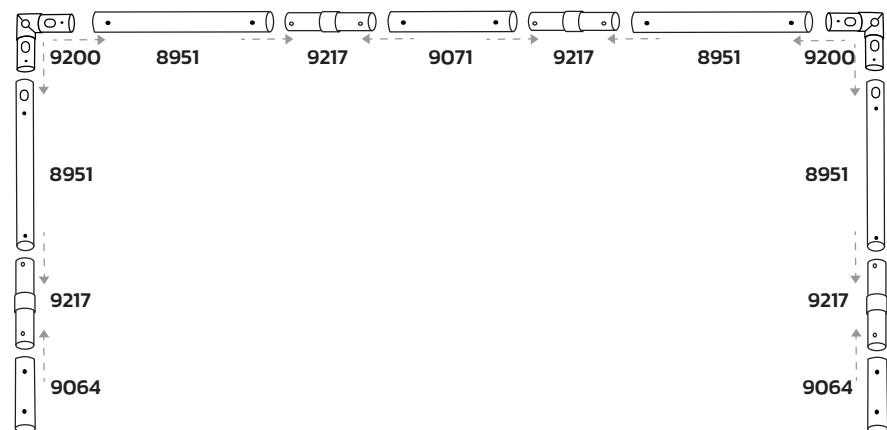

5 Fit the crossbar (step 4) to the base (step 3), affixing the 2 x 9064 to the 2 x 9255.

6 Assemble both arching tension bars, insert 1 x 9170 into 1 x 9163 then connect 2 x 9125 to 1 x 9163.



7 Lay the goal on its front. Fit the tension bars to the uprights, before returning the goal to the correct position. Secure the tension bars into the base. The tension bars will flex, allowing them to be put into place.

