
FORZA MINI LOCKING GOAL

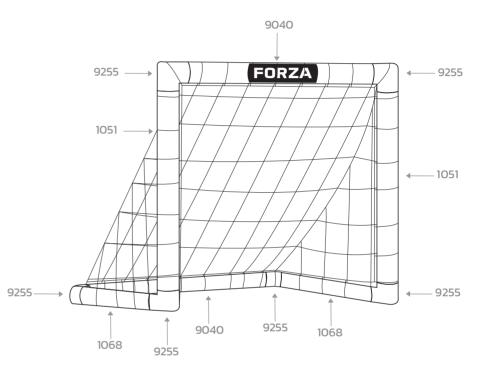

PART NO	9040	1051	1068	9255	LOCKING CLIPS	NET CLIPS	NET
QTY	x2	x2	x2	x6	x1 PCK	x1 PCK	x1

NET WORLD SPORTS »

WATCH THE VIDEOS

Learn how to assemble your goal and take your game to the next level.

www.youtube.com/networldsports



8461:2005 code of practice. Do not use goal with faulty parts.

The goal must always be secured to the ground. Weights to be used on hard surfaces, ground anchors on grass.

Always Inspect goal post and net for defects before use and repair damaged parts in accordance with BS

Never climb on the net or goal frame. The goal must never be used without the net fitted. Please adhere to safety instructions at all times.

 
Please ensure all locking clips are inserted into the connectors.

Additional Information


When the goal is not being used dismantle and store under cover. This goal conforms with BS8462:2005. Not suitable for children under 3 years. It is recommended that the goal is assembled by an adult. Warranty excludes net. Please see forzagoal.com/forza-goal-instructions for more details.



www.networldsports.co.uk // +44 (0) 1691 683 807 // cs@networldsports.co.uk



 
2 Insert all Locking Clips into all connectors 9255.




3

4

Assemble the base, attaching parts 9040 & 1068 to the connectors.

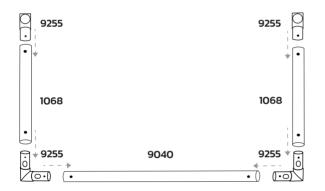


Assemble the crossbar and the upright section, attaching 9040 & 1051 to connectors.

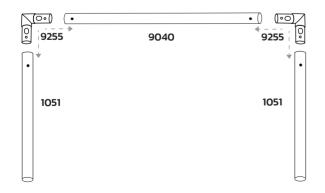



Fit the crossbar (step 4) to the base (step 3), affixing the 2 x 1051 to the 2 x 9255.

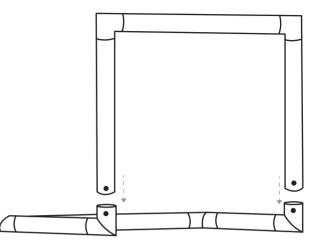



Place the net over the frame. The Net World Sports label indicates the top of the net. This needs to be at the top of the crossbar.

7

Starting with the top corners, fit the net by wrapping it around the posts and clipping to the inside using the net clips provided. Attach clips equally along the length of the net.

