8 Place the net over the frame. The Net World Sports label indicates the top of the net - ensure this is at the top of the crossbar. Align the side seams with the arching tension bars so that the net sits comfortably over the goal.

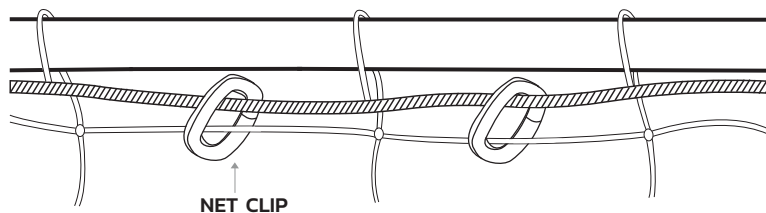**9** Starting with the top corners, fit the net by wrapping it around the posts and clipping to the inside using the net clips provided. Attach clips equally along the length of the net.

NET CLIP

10 Anchor the goal using the provided U-pegs ensuring posts are upright and the crossbar is level. The U-pegs fit around the base and push into the ground to keep the goal steady.

▶ **WATCH THE VIDEOS**

*Learn how to assemble your goal and take your **game** to the next level.*

www.youtube.com/networldsports

ⓘ Always Inspect goal post and net for defects before use and repair damaged parts in accordance with BS 8461:2005 code of practice.
Do not use goal with faulty parts.
The goal must always be secured to the ground. Weights to be used on hard surfaces, ground anchors on grass.
Never climb on the net or goal frame. The goal must never be used without the net fitted.
Please adhere to safety instructions at all times.

Additional Information
When the goal is not being used dismantle and store under cover.
This goal conforms with BS8462:2005.
Not suitable for children under 3 years.
It is recommended that the goal is assembled by an adult.
Warranty excludes net.

▶ f 🐦 📷 @NetWorldSports

FORZA
16 x 7 MATCH GOAL
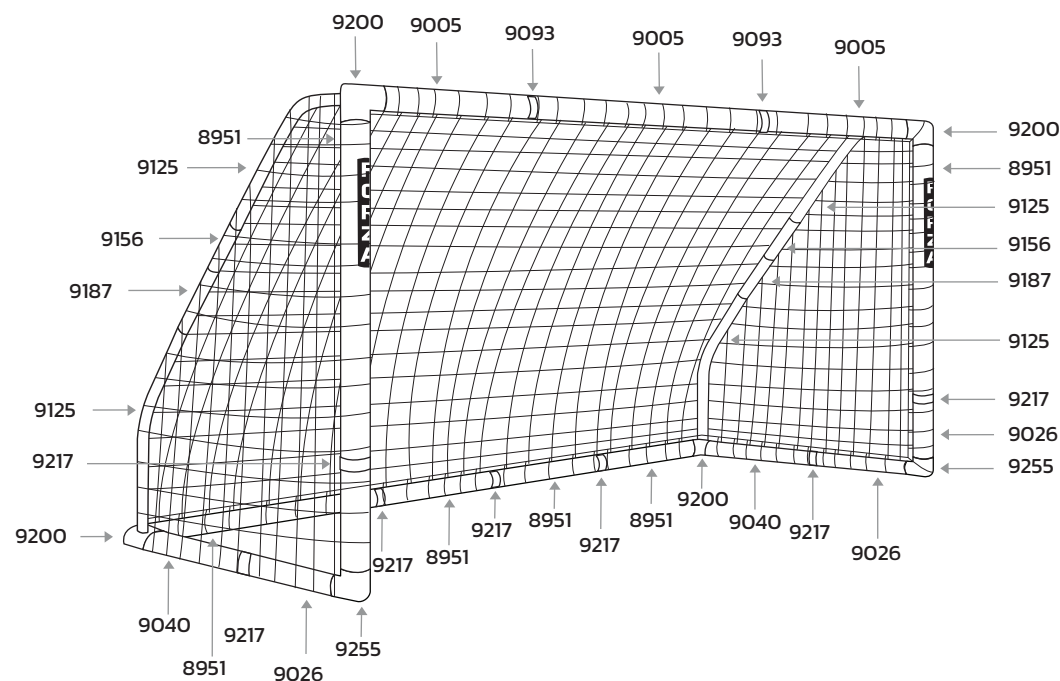
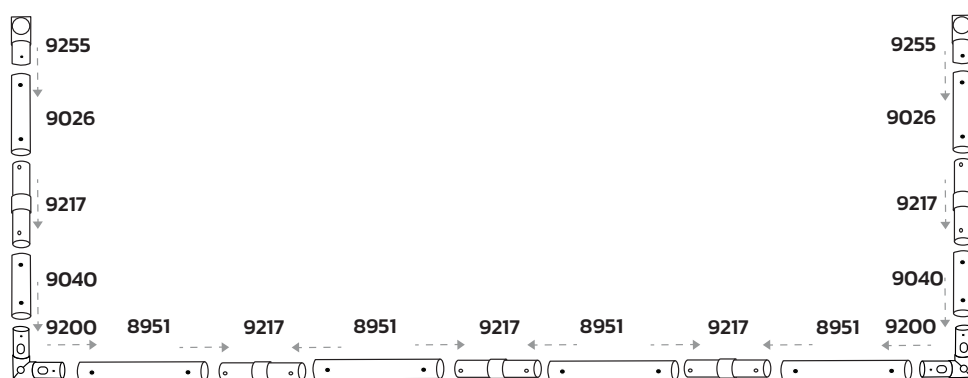| PART NO	8951	9093	9005	9026	9040	9125	9156	9187	9200	9255	9217	LOCKING CLIPS	U-PEGS	NET CLIPS	NET
QTY	x6	x2	x3	x4	x2	x4	x2	x2	x4	x2	x6	x1 PCK	x6	x1 PCK	x1

NET WORLD SPORTS »

**1** Lay out all components and ensure that they match the parts list.

2 Insert all Locking Clips into the connectors 9200, 9255 & 9217.

9200　　　　9255　　　　9217

LOCKING CLIPS
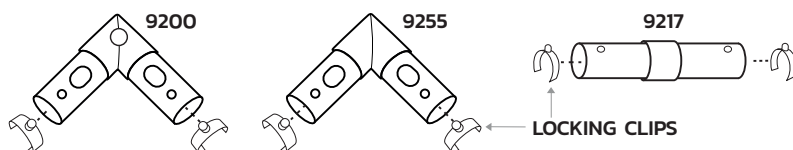
3 Assemble the base, attaching parts 9026, 9040 & 8951 to the connectors.

9255　　　　　　　　　　　　　　　9255
9026　　　　　　　　　　　　　　　9026
9217　　　　　　　　　　　　　　　9217
9040　　　　　　　　　　　　　　　9040
9200　8951　9217　8951　9217　8951　9217　8951　9200

4 Assemble the crossbar and the upright section, attaching 9005, 9026 & 8951 to the connectors.

9200　9005　9093　9005　9093　9005　9200

8951　　　　　　　　　　　　　　　8951
9217　　　　　　　　　　　　　　　9217
9026　　　　　　　　　　　　　　　9026
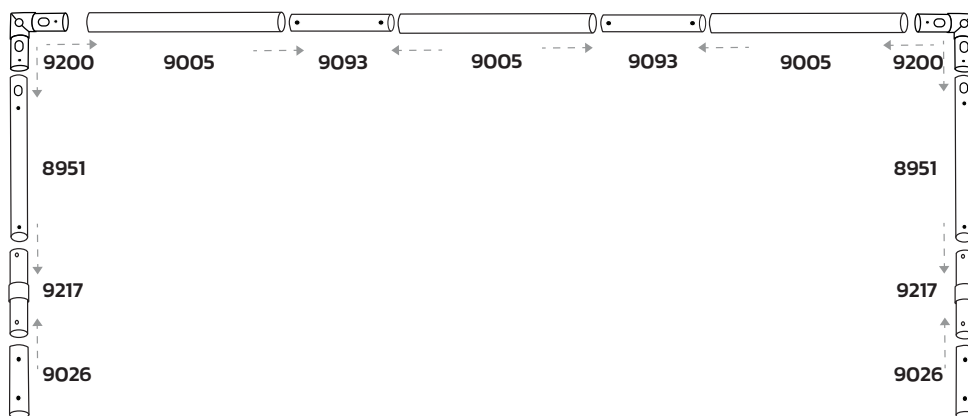
5 Fit the crossbar (step 4) to the base (step 3), affixing the 2 x 9026 to the 2 x 9255.

6 Assemble both arching tension bars, connecting 2 x 9125 to 1 x 9187 & 9156.

9125　　　9187　9156　　　9125
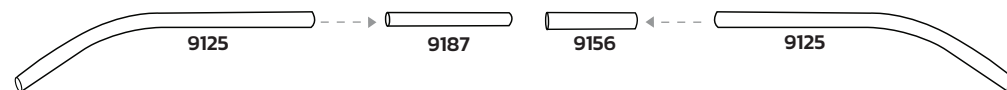
7 Lay the goal on its front. Fit the tension bars to the uprights, before returning the goal to the correct position. Secure the tension bars into the base. The tension bars will flex, allowing them to be put into place.